

W208 ECU Removal Manual



Step 1:

Locate the battery in the trunk next to the spare tire and disconnect the negative battery cable (arrow).



Step 2:

Locate the ECU box under the hood, on the passenger side (arrows)



Step 3:

Remove the 4 screws (arrows) that hold the cover on and remove the cover.




Step 4:

The ECU resides in the rear of the box. Unplug the connectors on plug one and five (far L and far R). Squeeze the lock tab in, and pull the plug out by the connector. Do not pull the connectors out by the wires, or damage to the connector could result.



Step 5:

Remove plugs 2, 3 and 4 (middle three plugs) (see above picture) by pressing the release button (arrow) and swinging the grey release lever down. Do not force the release lever.

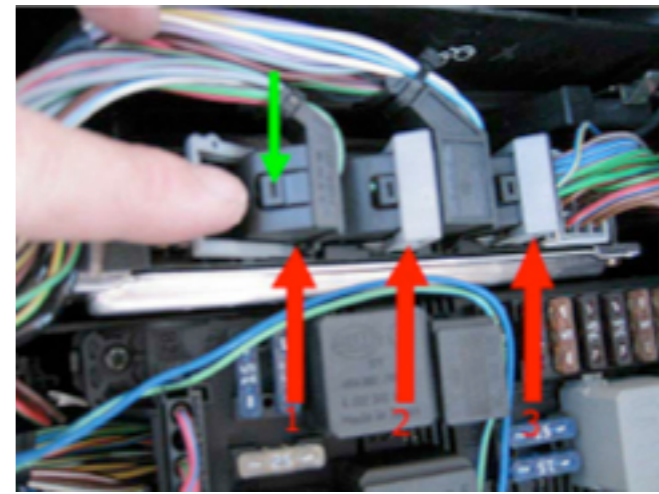

Step 6:

Pul the ECU out of the ECU box by pulling straight up.



Step 6:

Send the ECU to the address listed below. Many of the standard sized express boxes are ideal for an ECU. Wrap the ECU in some packing material. The packing need not be excessive, a single layer will be sufficient. Pack box so the ECU is not allowed to move freely in the box.

Kleemann USA Inc.
3455 Fillmore Ridge Heights
Colorado Springs , CO 80907
USA

phone +1 719 473 6441
fax +1 719 578 0345

sales@kleemannusa.com

